


BAFFLES 9' LONG INSTALL GUIDE

Available with 5.5" or 10" baffles

Suspend via Gripper hangers
and grommet detail on baffles

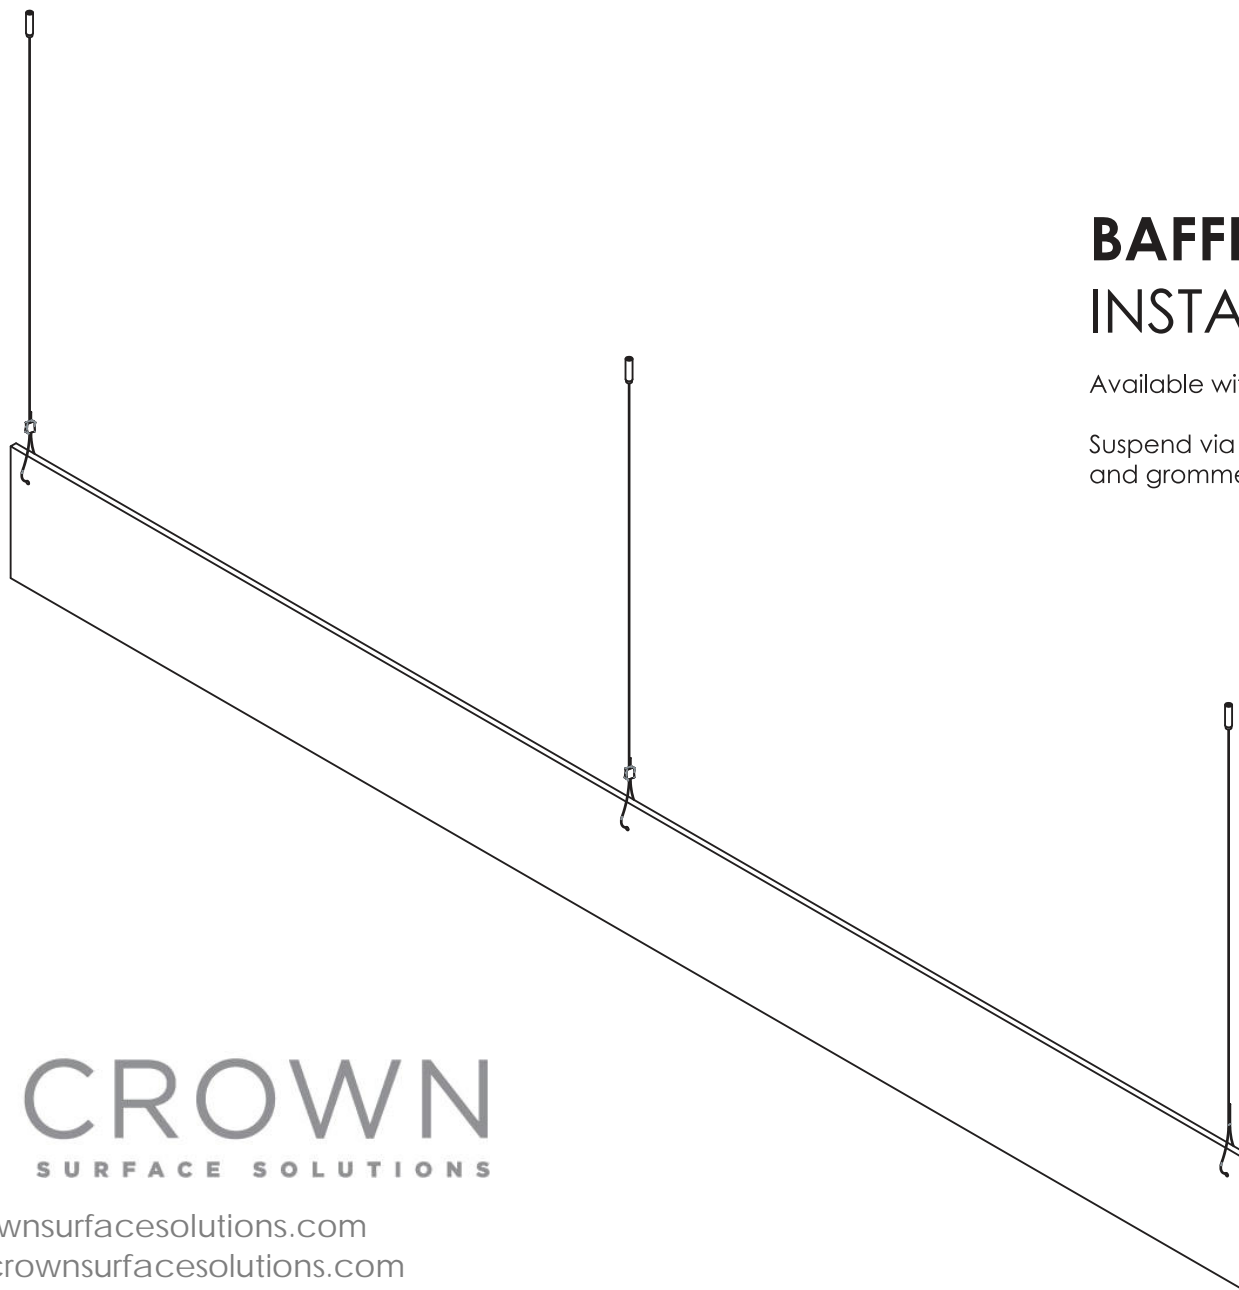

CROWN
SURFACE SOLUTIONS

www.crownsurfacesolutions.com


e: info@crownsurfacesolutions.com

p: 416.245.2900

BAFFLES


SUSPENDED FIXING METHOD

- 1) Drill & fix off 1/4" studs (supplied for timber substrate) in appropriate anchor for application.



STEP 1

- 2) Feed swaged wire through 'dead end' and screw dead end securely onto 1/4" stud (3 off)

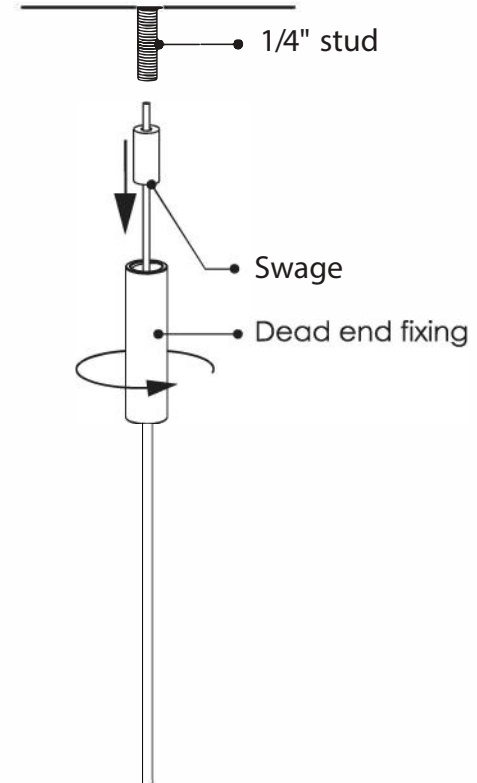


STEP 2

BAFFLES


SUSPENDED FIXING METHOD

- 3) Feed Gripper onto loose end of wire ensuring there is enough feed wire to feed through grommet and back to Gripper.

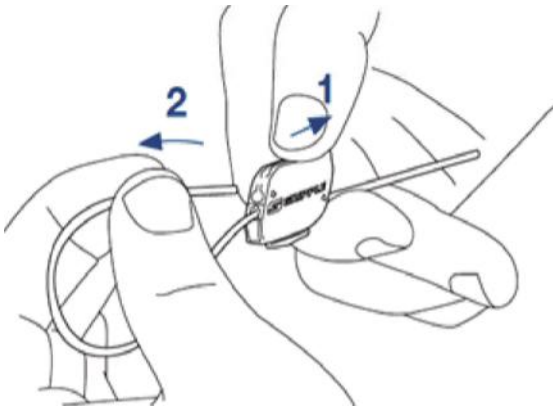

STEP 3

- 4) Loop wire through each of the 3 grommet holes located on the baffle and thread through final hole in the Gripper body. Tighten to position as required.

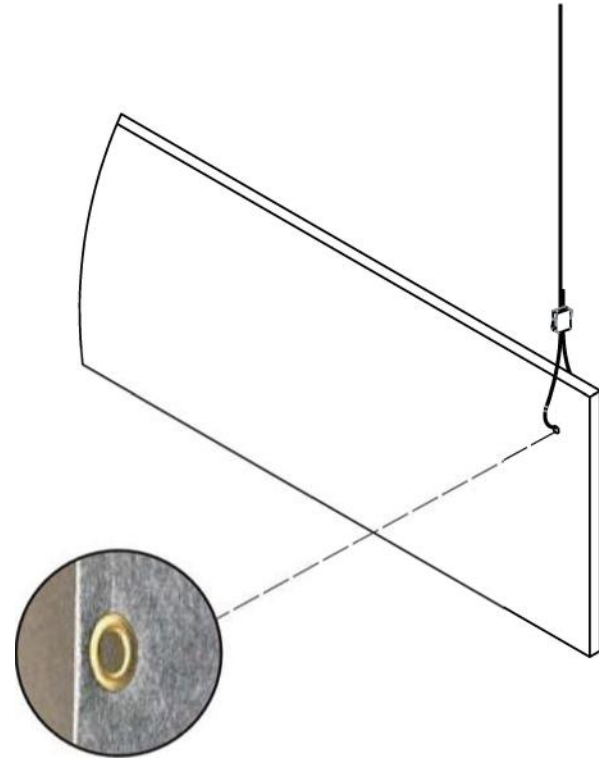

STEP 4