


zintra™
LOUVER
INSTALL GUIDE




Toll free 1.800.268.1300 Sans frais 1.800.361.7881


1) Dock square extrusion.

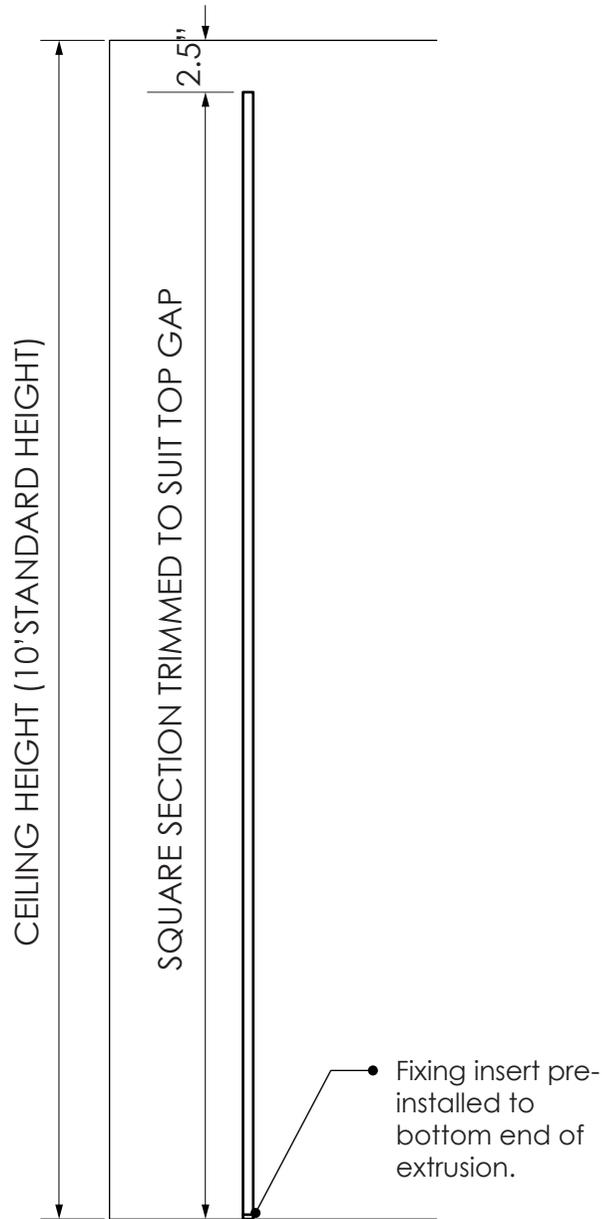


2) Knock-in fixing insert to open end of extrusion.

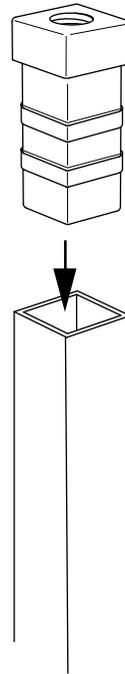


3) Dock top tube to suit ceiling height.

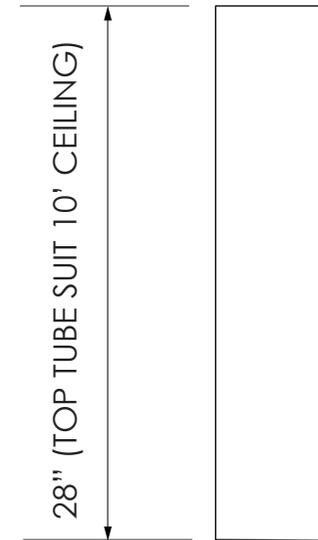


4) Fix base plate to knock-in fixing with 3/8" countersunk bolt.

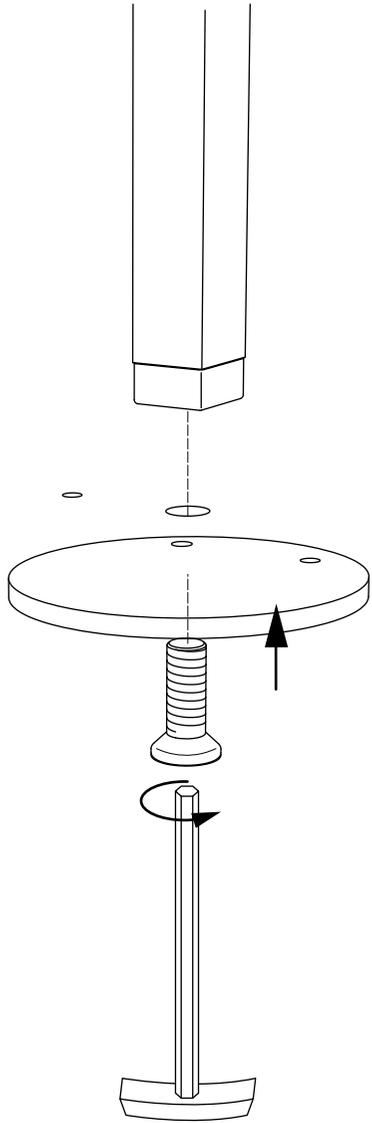


5) Sleeve bottom tube & stainless steel shroud over square extrusion.

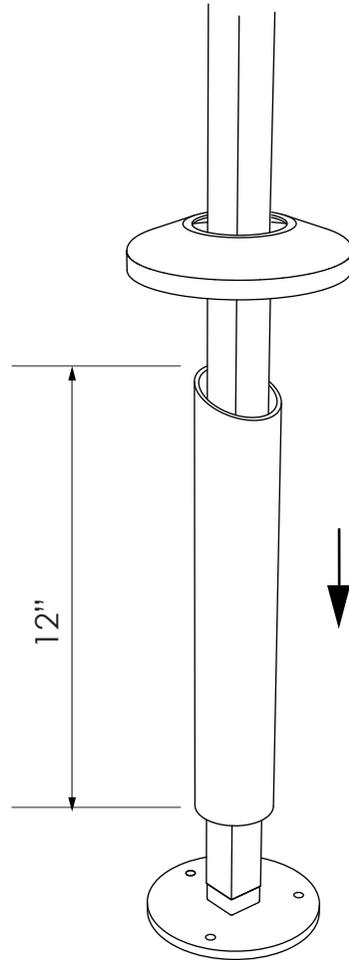


6) Sleeve louver & spacer tubes. Repeat as required.

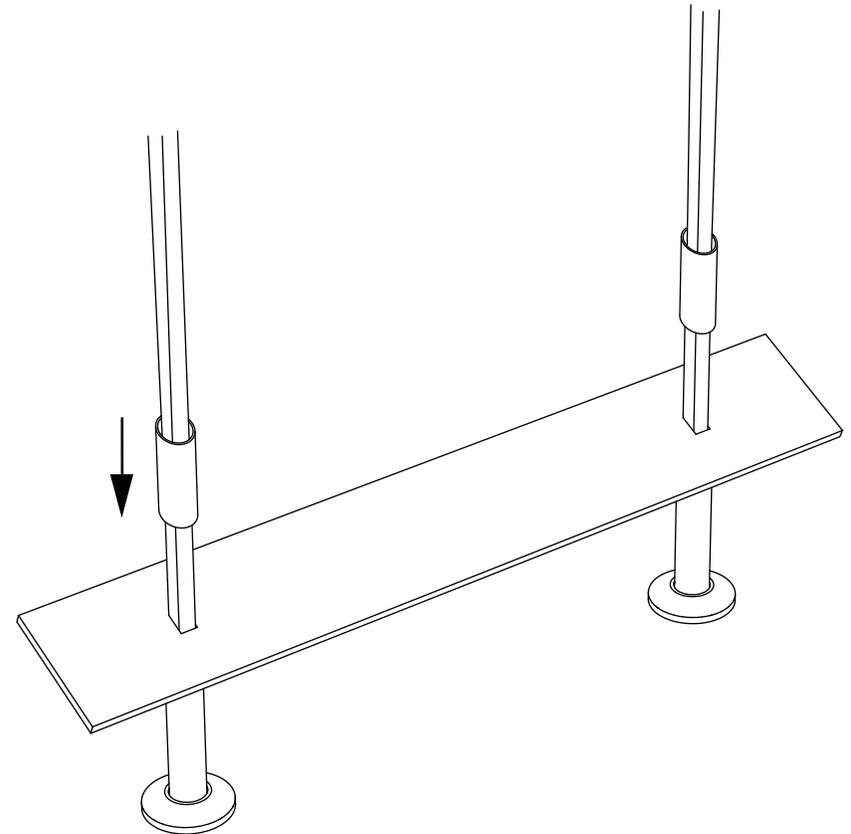


7) Screw in tensioner to top extrusion with threaded end cap.

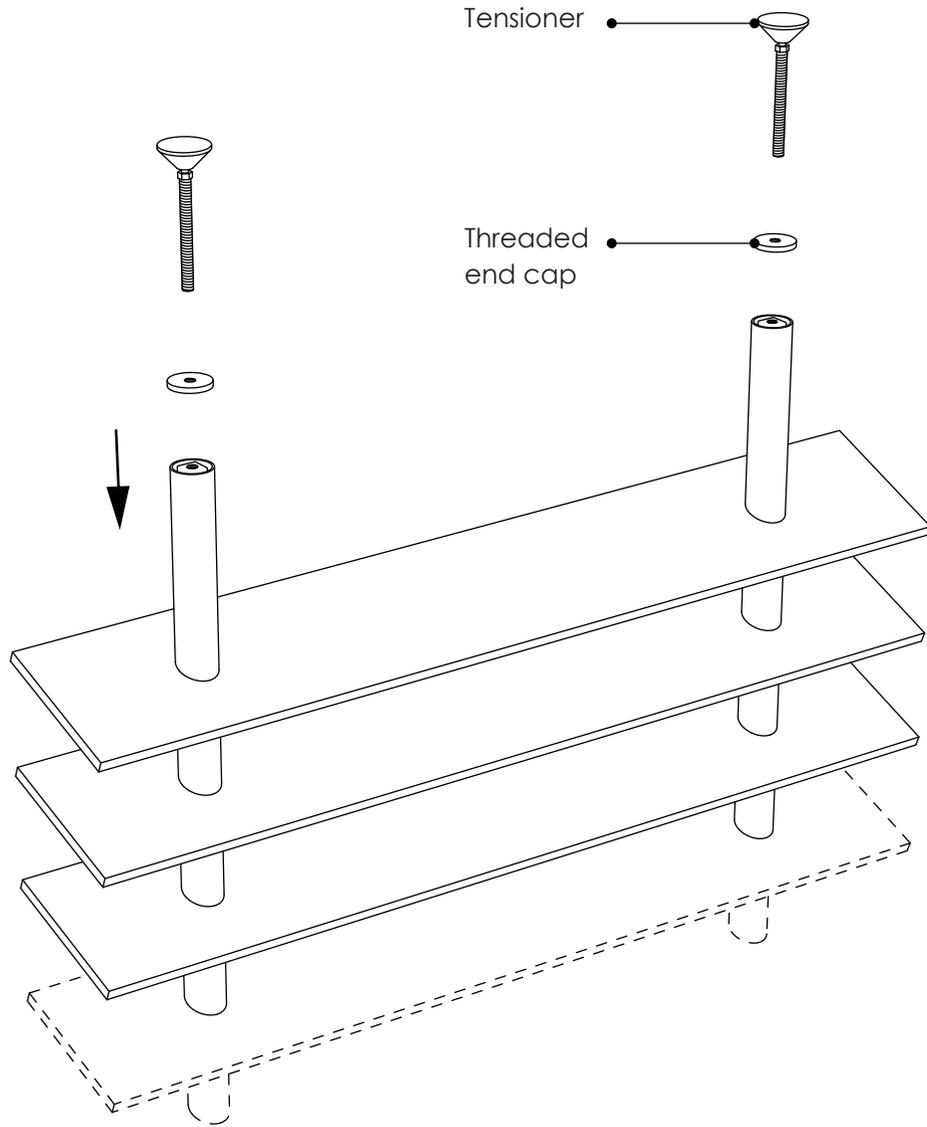

8) Compress louvers with threaded end cap & screw out tensioner as required.

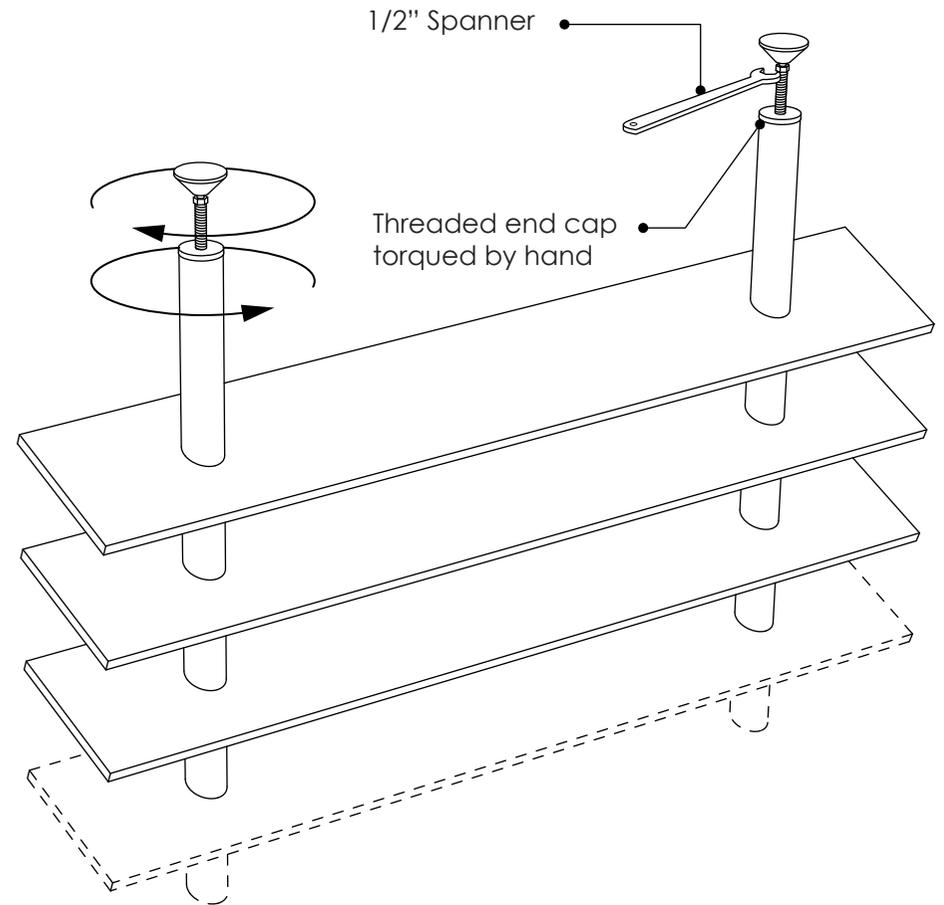

9) Screw out tensioner to compress louver assembly into cavity & then sandwich spacers with threaded end cap by screwing down.

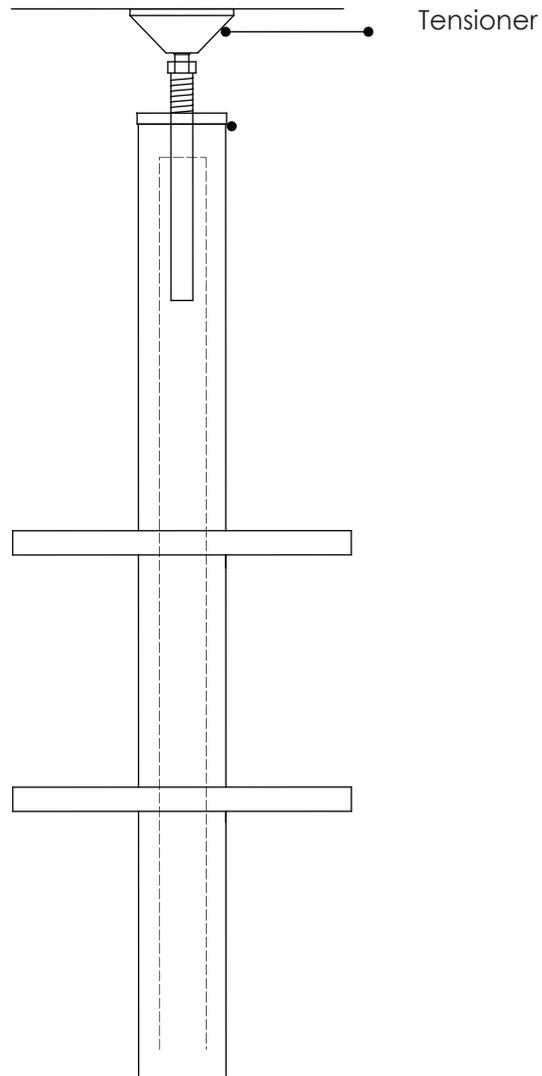

10) Ensure level before fixing off base plate to floor with appropriate fastener for application.

