


zintra™
Standard -
Square
CLOUDS
INSTALL GUIDE




Toll free 1.800.268.1300 Sans frais 1.800.361.7881
TORONTO | 88 Ronson Drive, Etobicoke, Ontario M9W 1B9
MONTREAL | 4269 Ste. Catherine Ouest #701 Montreal, Quebec H3Z 1P7
VANCOUVER | 611 Alexander Street, Suite 303 Vancouver, British Columbia V6A 1E1

1) Assemble grid profiles via slots.

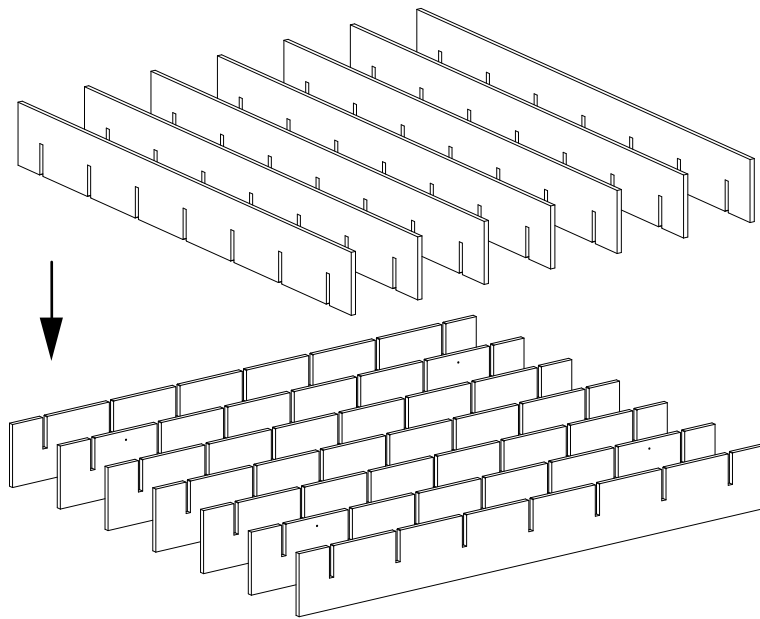


2) Mark the hole locations for 4 off fixing points per corresponding mounting holes in panels.

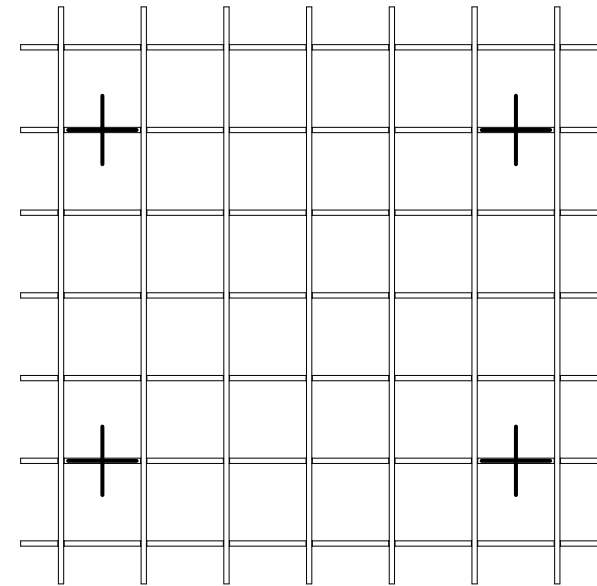


REFLECTED CEILING PLAN VIEW


3) Drill & fix off 1/4" studs (supplied for timber substrate) in appropriate anchor for application.



4) Feed swaged wire through 'dead end' and screw dead end securely onto 1/4" stud (4 off).

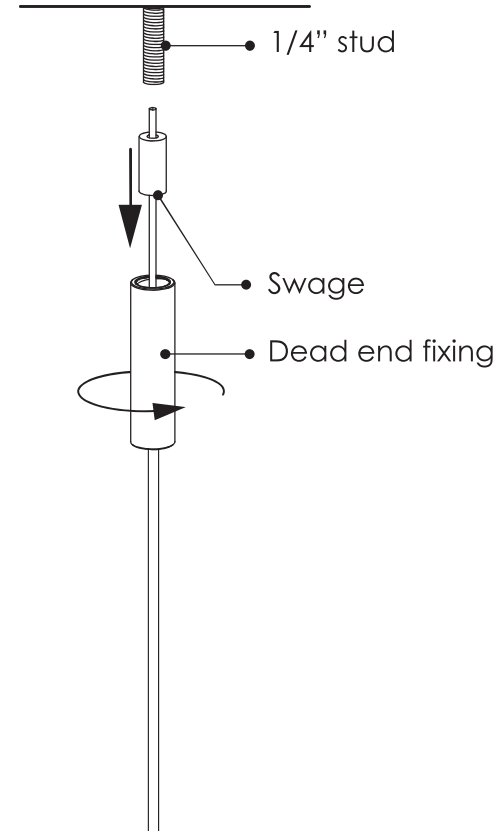

5) Feed Gripper onto loose end of wire and then feed wire through fixing holes in panel before feeding back through Gripper.

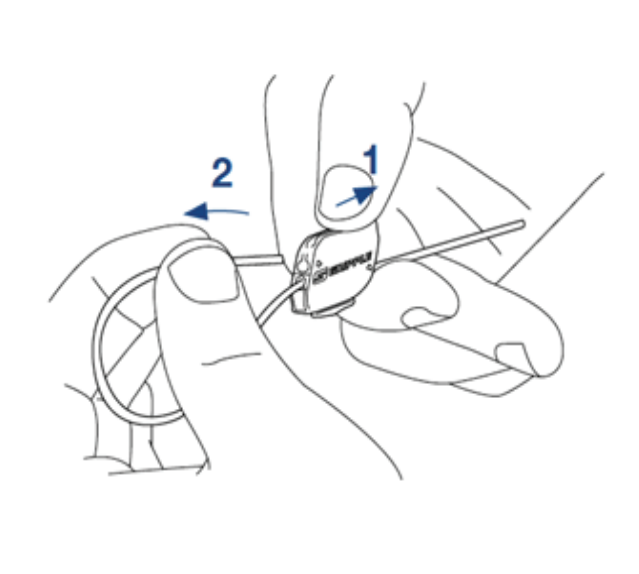

6) Repeat **Step 5** to remaining fixing points. Adjust wire suspension height accordingly to ensure level hanging of Cloud.

