MEDIUM GIFFARD CLOUD
INSTALL GUIDE

CROWN
SURFACE SOLUTIONS

www.crownsurfacesolutions.com
e: info@crownsurfacesolutions.com
p: 416.245.2900

MEDIUM GIFFARD CLOUD
ASSEMBLY

2x SMALL JOINING PROFILE

14x VERTICAL PROFILE

1x LARGE JOINING PROFILE
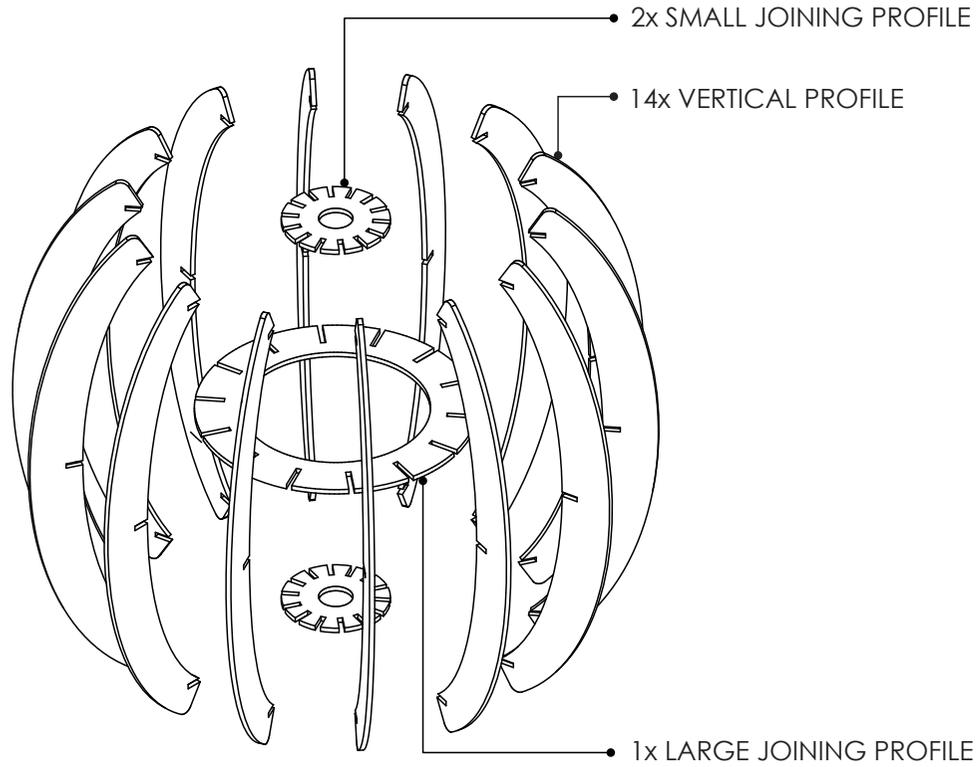
1) Assemble cloud profiles as shown.
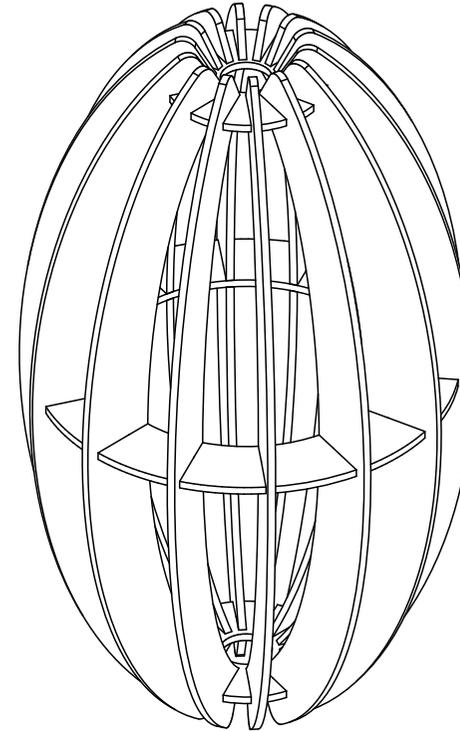
2) Assembly is complete.

STEP 1

STEP 2

MEDIUM GIFFARD CLOUD
SUSPENSION METHOD

3) Place cloud assembly up to ceiling in desired location. Mark position of **1 x** through hole which corresponds to the centre of the cloud.

CEILING

CEILING
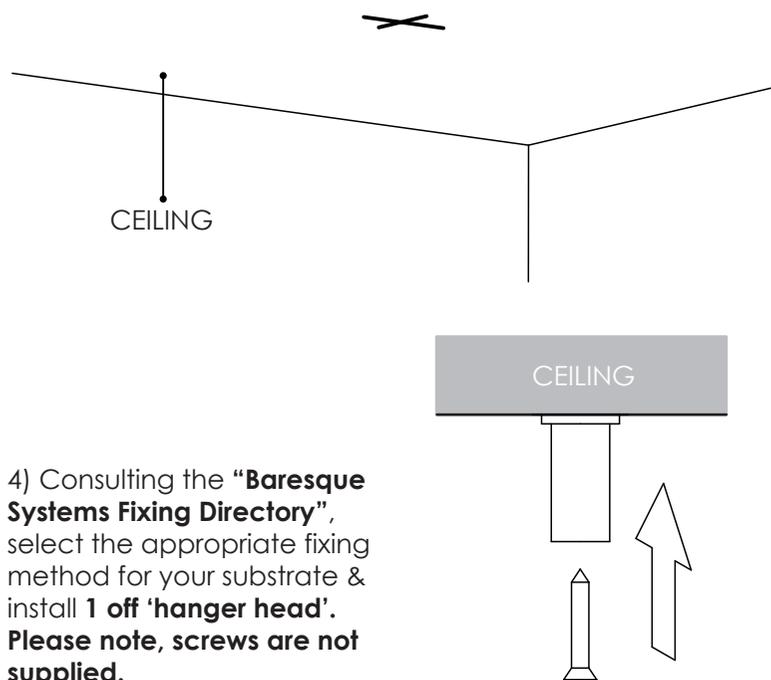
4) Consulting the **"Baresque Systems Fixing Directory"**, select the appropriate fixing method for your substrate & install **1 off 'hanger head'. Please note, screws are not supplied.**

STEP 3 & 4

5) Feed swaged wire through tip of 'wire adjuster' (as shown). Push button (shown in grey) to adjust wire length. Release the button to lock in place.

WIRE ADJUSTER

PUSH HERE
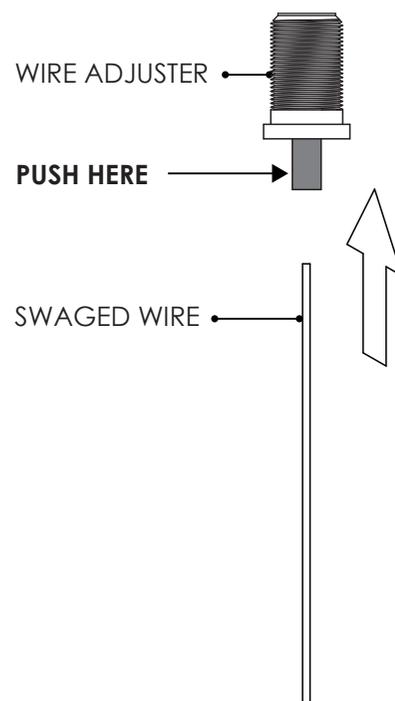
SWAGED WIRE

6) Feed swaged wire through hole in the side of 'hanger head'. Screw 'wire adjuster' into 'hanger head'. Adjust wire to desired length.

a.

b.
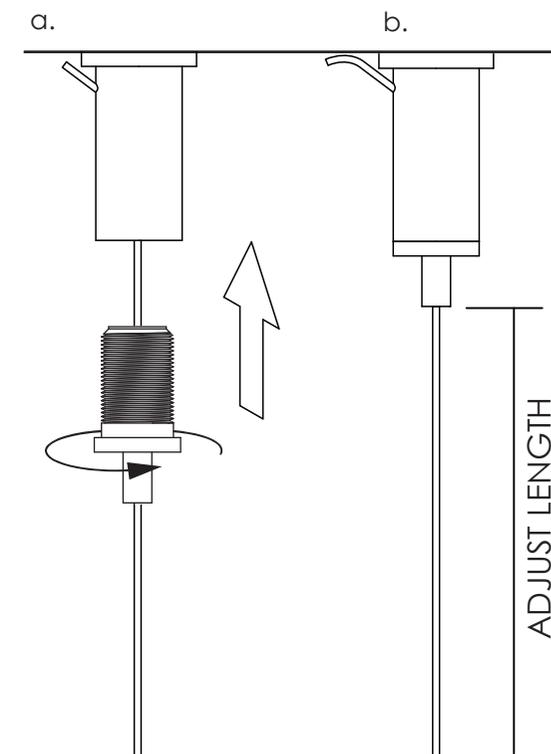
ADJUST LENGTH

STEP 5 & 6

MEDIUM GIFFARD CLOUD
SUSPENSION METHOD

7) Insert 'S' hooks into mounting slits on cloud as shown.

'S' HOOK IN MOUNTING SLIT
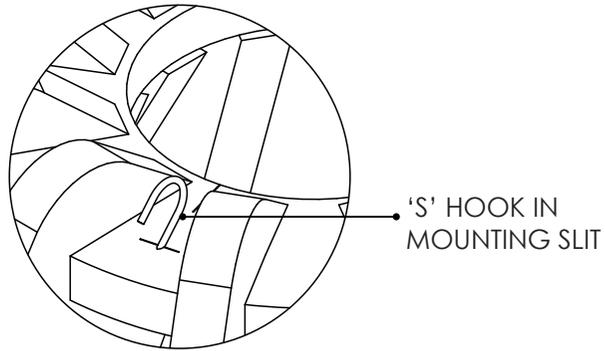
8) Suspend cloud by looping 'S' hooks through swaged wire. Note- 2 'S' hooks are required per wire.

SS SWAGED WIRE
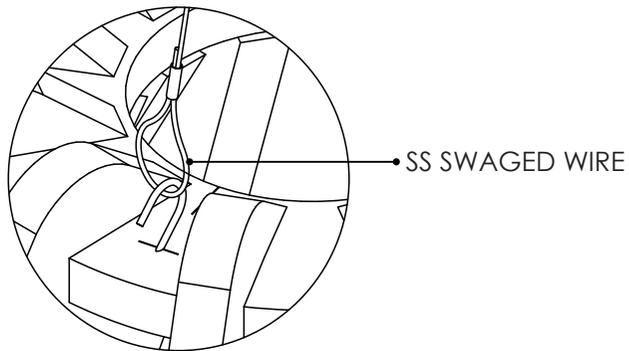
STEP 7 & 8

9) Re-adjust wire length as explained in STEP 5 until you are satisfied with the hanging height. Note, there are 2 orientation options as shown below.

OPTION A   OPTION B

TRIM IF NECESSARY
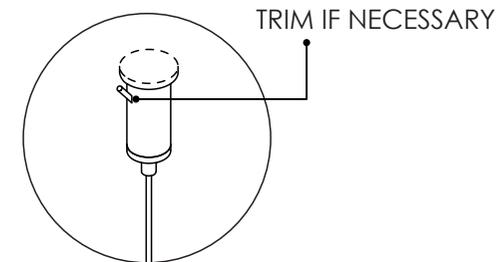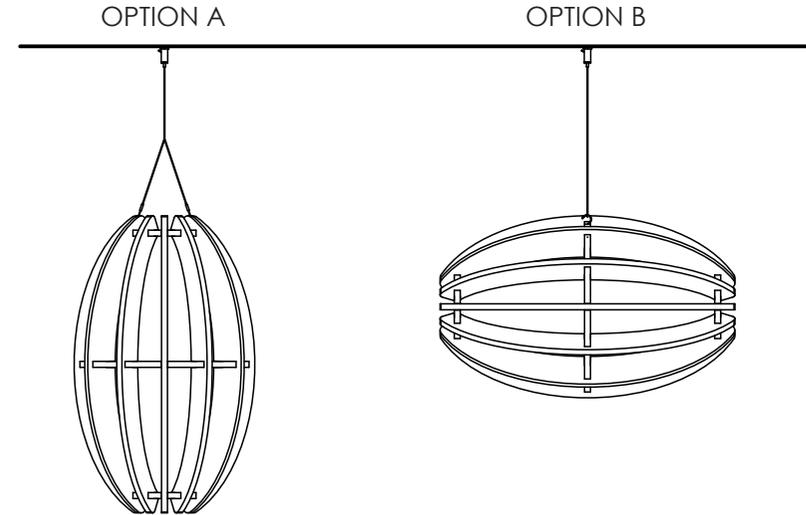
STEP 9

*Please note, above linework is representative only.
Your cloud may not be depicted.

MEDIUM GIFFARD CLOUD
PARTS

WIRE ADJUSTER
1 OFF
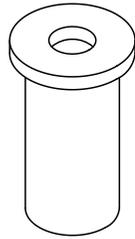
HANGER HEAD
1 OFF
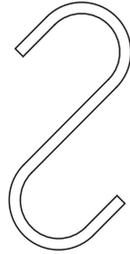
'S' HOOK
2 OFF
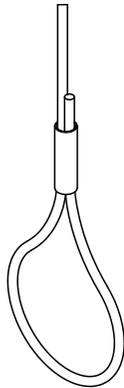
SWAGED WIRE Y-FIT
1 OFF
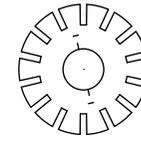
SMALL JOINING PROFILE
2 OFF
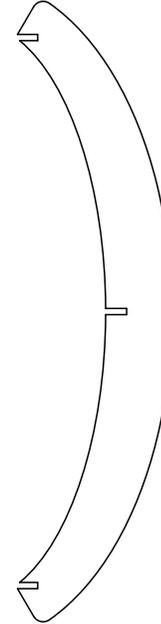
VERTICAL PROFILE
14 OFF

LARGE JOINING PROFILE
1 OFF